


Long Reach Pruner

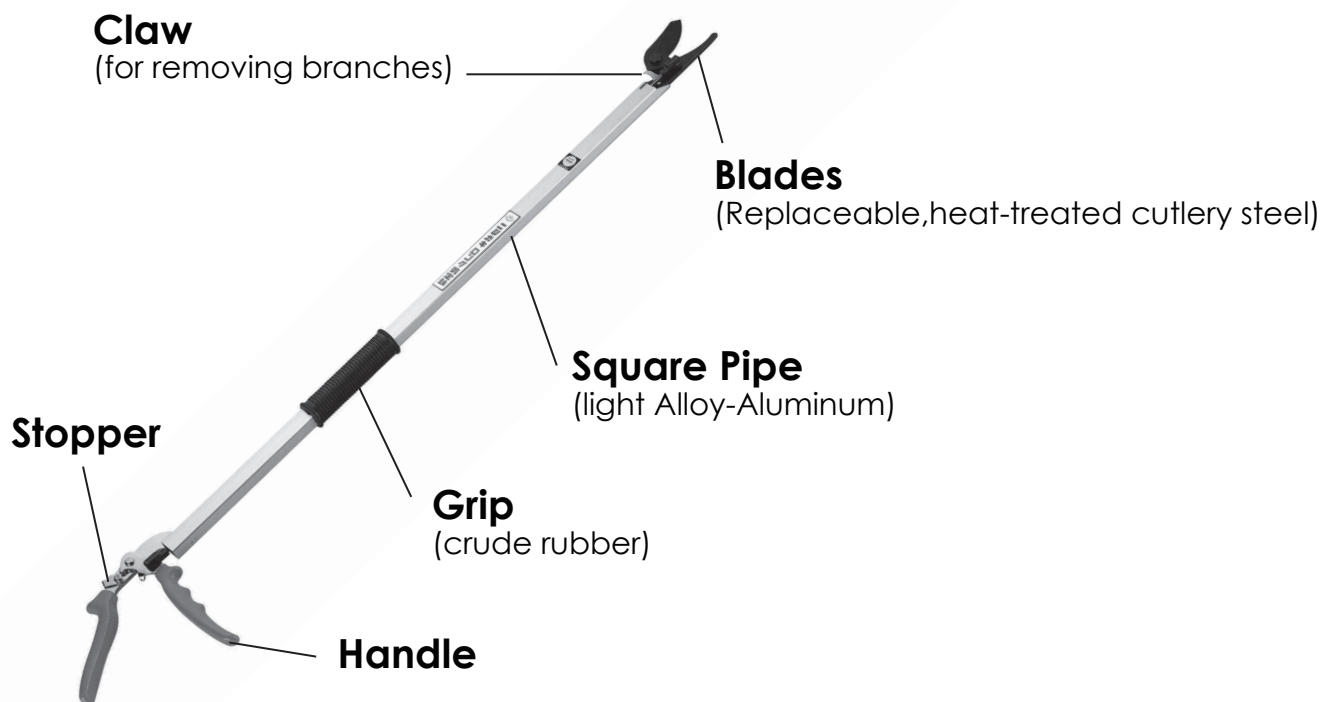

Product Option

Item	Length	Weight	Use
N-100-0.6	0.6m	550g	For shrubs/one handed/bimanual
N-100-1.0	1.0m	730g	For shrubs/one handed/bimanual
N-100-1.5	1.5m	880g	For high trees/bimanual
N-100-2.0	2.0m	1,110g	For high trees/bimanual
N-100-50	Replacement Blade for N-100 series		



WARNING

Safety Instruction

- Keep away from electricity.
This product is made of metal and is not insulated against electric shock.
Approaching or contactig electric power lines with this product may cause death by electrocution or serious body injury.
Electricity can move through branches, especially if they are wet.
- These shears are dedicated to branch cutting. Use it only for its intended purpose.
- Keep shears away from children and bystanders.
- Dress properly.
Wear hard hat, protective glasses, face and ear protection and gloves to reduce the risk of personal injury.
- Make sure you always have good footing.
Do not use this tool on unstable places such as roof and the top of horse.

Precaution

Do not cut thick branches. (For live trees: up to 1"/25mm)
Do not twist the pruner while cutting, as you may chip the cutting edge or bend the blades.

Maintenance

- Clear sap, resin and residues. Then oil the indicated parts.
Use plant oil to screw parts on the blade.
- Keep the cutting tool sharp.
When the blade becomes dull, use a sharpener, or replace it.
Blade Assy is available for the replacement.

Storage

- Close the mouth and keep the tool from moving, then store the tool out of the reach of children and other unauthorized persons.