




NISHIGAKI



Fruit Picker Telescopic

OPERATION

1. Release the handle, first.

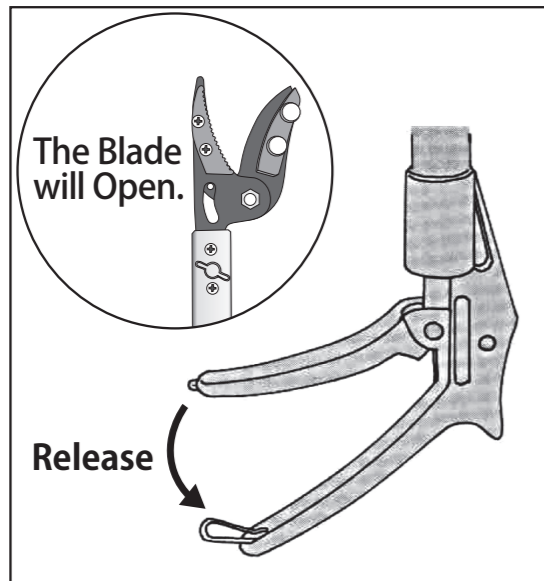


2. Open the clamp lever, adjust the pole length, then close the lever.

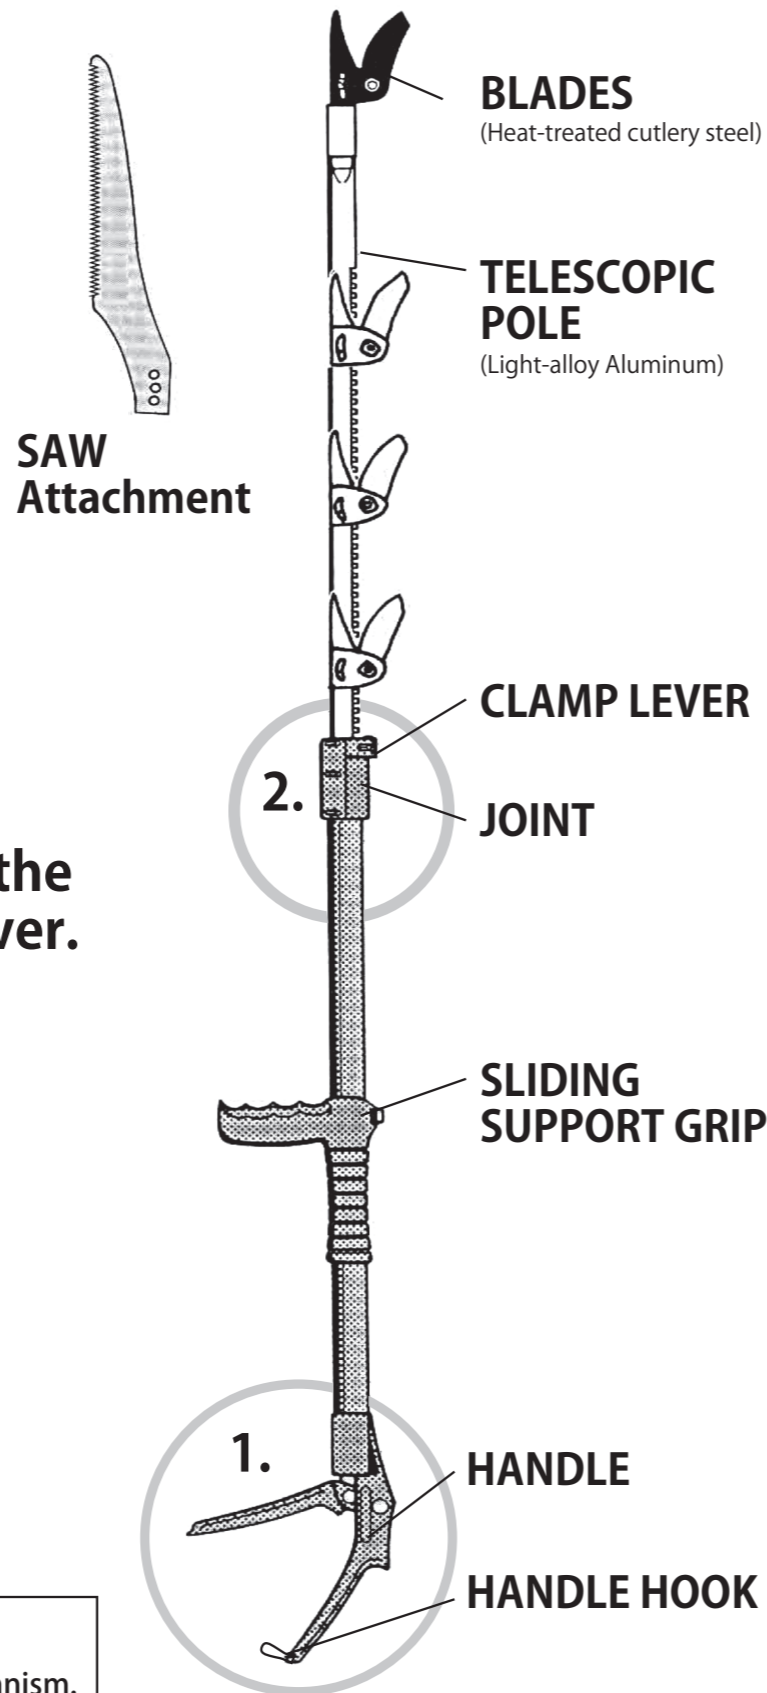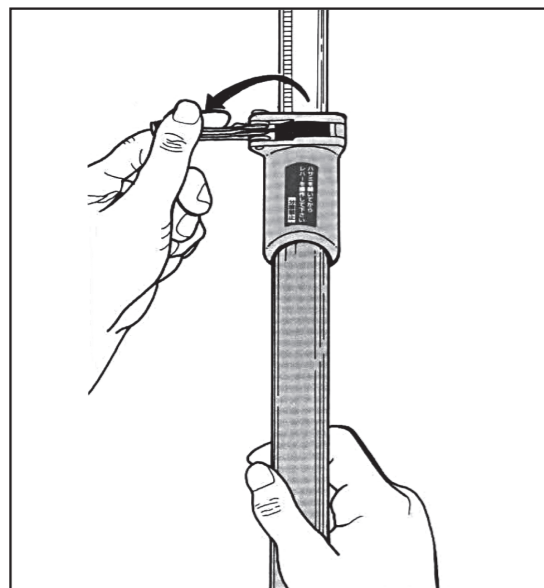


THREE WAYS To USE



(1) FRUIT PICKING with Cut and Hold
Attach the Stem Grip. (Orange)

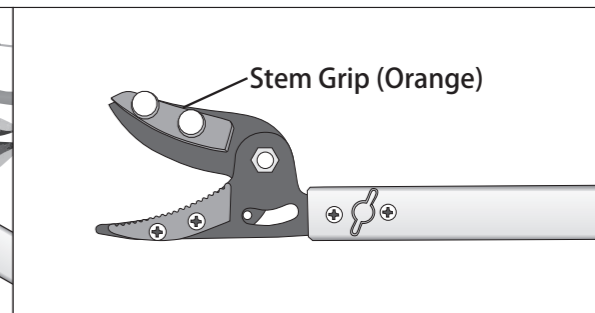

(2) Cutting Branches
Remove the Stem Grip.

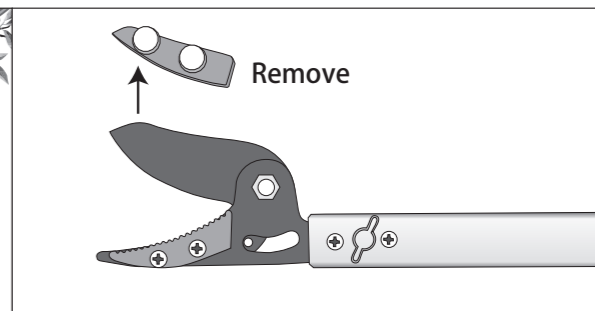

(3) Pruning Thick Branches with a Saw
Attach the Saw.

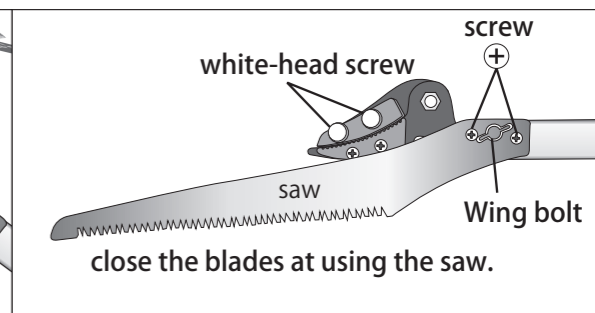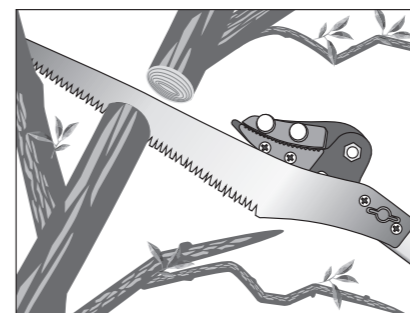

CAUTION

Do not open the clamp lever without releasing the handle.
It may cause damages to the inside mechanism.