


Instructions for Use

These shears have sharp cutting edges. Use them with caution and only for their intended purpose; otherwise, you may injure yourself or damage the tool. Do not twist the shears while cutting, as you may chip the cutting edge or bend the blades. Inspect these shears before each use and replace or repair if parts are worn or damaged.



Instructions for Resharpenering

Resharpener the main bevel edge, maintaining the original bevel angle.
After sharpening the main bevel, make a few light passes on the reverse side (back bevel) with a fine sharpening stone.
Do not widen the back bevel; the ratio of the bevel widths should be about 9 to 1.

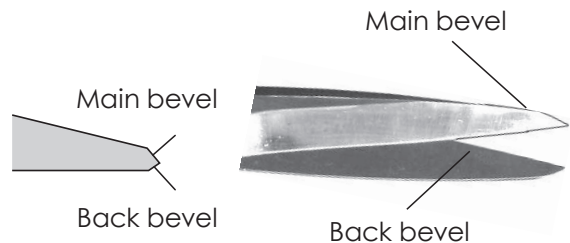

Warning

- 1) These metal shears will conduct electricity; do not use near electrical objects.
- 2) Be sure to lock the blades after use.
- 3) Keep shears away from children.