

INSTRUCTION MANUAL

NOBINOKO

Thank you for purchasing NOBINOKO. Read this document carefully before using to understand the proper use.
Do not use this tool other than its intended purpose: pruning trees. Do not discard this instruction manual.

Use purpose

- Fruit tree pruning, care for plants, temporary frame work, construction work (very useful for working on high and narrow places)

Specifications

Product Number	Product Name	Saw Size	Storage size	Use size	Weight
N-751	NOBINOKO 1100	210mm(8.27in)	530mm(20.87in)	770-1100mm(30.32-43.31in)	430 g (15.17oz)
N-752	NOBINOKO 1300	210mm(8.27in)	630mm(24.80in)	870-1300mm(34.25-51.18in)	470 g (16.58oz)
N-753	NOBINOKO 1800	270mm(10.63in)	880mm(34.65in)	1180-1800mm(46.46-70.87in)	660 g (23.28oz)
N-754	NOBINOKO 3000	270mm(10.63in)	1480mm(58.27in)	1780-3000mm(70.08-118.11in)	950 g (33.51oz)
N-750-1	Spare blade 210	210mm(8.27in)	For N-751 / 752		
N-750-3	Spare blade 270	270mm(10.63in)	For N-753 / 754		



Warning Wrong use may result in electric shock, and/or serious injury or death.

- Do not work at the area of electric shock possibility such as nearby electric wires.
- The blade is very sharp. Do not touch the blade at any time.
- When cutting, branches and tree scraps are falling. In addition, please do not work in the fall point, as the blade parts may fall and cause unexpected injury. In particular, please pay attention to children and pets.
- Use personal protective equipment. Always wear eye-protection, helmet and gloves.
- Keep proper footing and balance. Do not work at unstable position such as roof, stepladder, etc.
- After use, close the blade and keep it out of the reach of children.

Caution Please be sure to protect

- Please do not use this product for purposes other than its intended use, such as pruning.
- Before use, please inspect for the loosening of the screws and whether there is any damage to the parts, and use after confirming safety.


Instructions



Caution


Wear gloves when opening, closing, removing, installing the saw blade, as the blade edge may cause injury.

How to open the saw blade

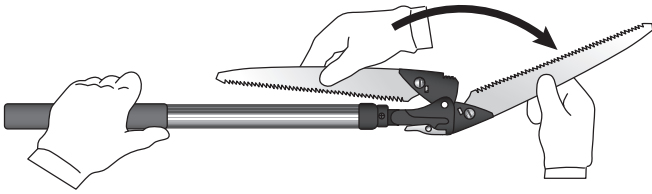


- ① Hold the spine of the saw blade and open it in the direction of the arrow.
- ② Open the blade until sounding "click", it locks into the first stage of the angle adjustment groove.

Changing the angle of the blade edge

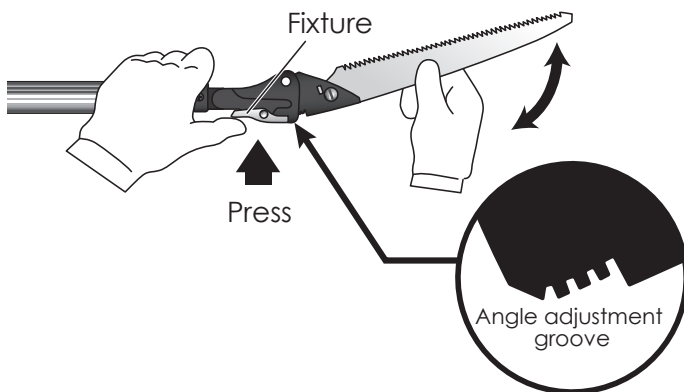


Press on the fixture (where pointed out by the arrow) to release the blade and adjust the angle (4 stages).

How to extend the handle

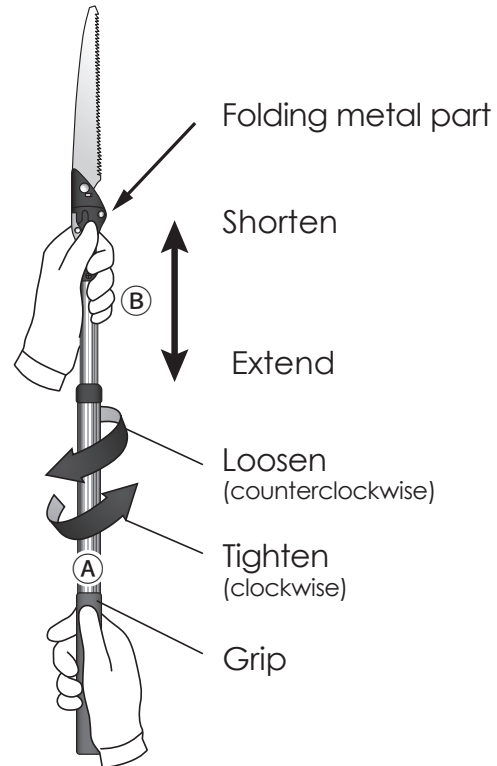


- ① Grasp the folding metal part and the grip respectively, and lightly turn (counterclockwise) the grip in the loosening direction shown by the arrow (A).
- ② Pull out the grip in the extending direction shown by the arrow (B) and turn (clockwise) it in the tightening direction shown by the arrow (A) to fix.

How to remove the saw blade

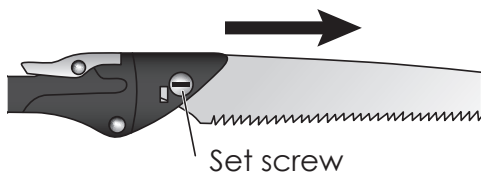

- ① Loosen the set screw with a coin or screwdriver and remove it.
- ② Pull out the saw blade in the direction shown by the arrow.

How to attach the saw blade

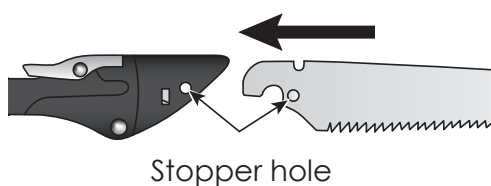

Insert the saw blade into the back metal in the direction shown by the arrow and align the back metal with the stopper hole in the blade. Install the set screw and retighten it with a coin or screwdriver to ensure no loose.