


**NISHIGAKI**

Long Reach Pruner Orchard

高枝切アロ

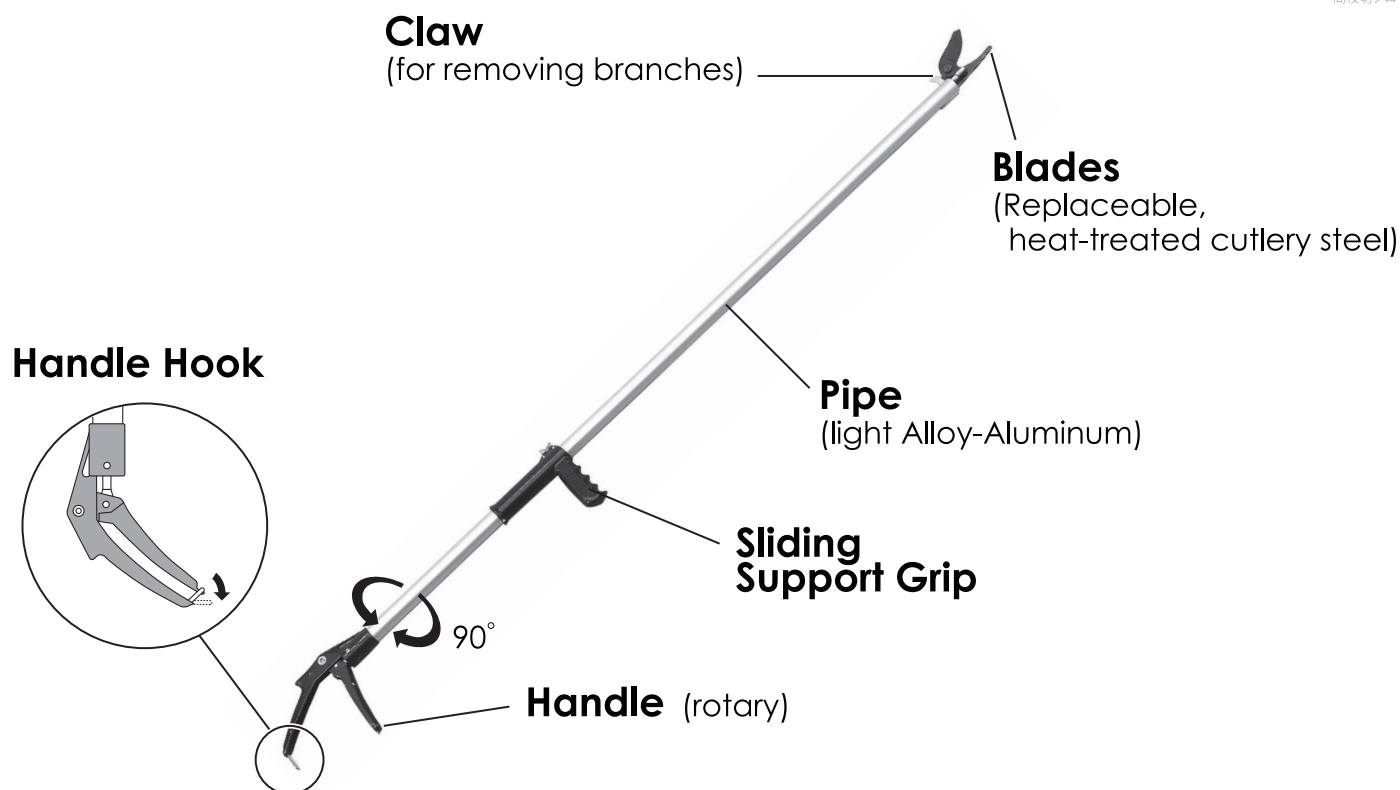

Product Option

Item	Product name	Length	Weight
N-106	Long Reach Pruner Orchard 1.5M	1.5m	770g
N-107	Long Reach Pruner Orchard 2.0M	2.0m	920g
N-107-50	Replacement Blade for Long Reach Pruner Orchard series	—	—

**WARNING**

Safety Instruction

- These shears are dedicated to branch cutting. Use them only for their intended purpose.
- Keep away from electricity.
This product is made of metal and is not insulated against electric shock.
Approaching or contacting electric power lines with this product may cause death or serious body injury by electrocution.
Electricity can move through branches, especially if they are wet.
- Keep shears away from children and people around you, when you use the tool.
- Dress properly. Wear hard hat, safety goggles, face and ear protection item and gloves to reduce the risk of personal injury.
- Make sure you always have good footing.
Do not use this tool on unstable places such as roof and the top of horse.

Precaution

- Do not cut thick branches. (For live trees: up to 1"/25mm)
Lopping over the limit may cause breaks.
- Once holding branches, **don't try to pry.**
That may cause blade chipping and deformation.

Maintenance

- Clear sap, resin and residues. Then oil the indicated parts.
Use plant oil to screw parts on the blade.
- Keep the cutting tool sharp.
When the blade becomes dull, use a sharpener, or replace it.
Replacement blades are available.

Storage

- Close the mouth of the tool and keep it in safe place and tool should be out of the reach of children and other unauthorized persons.